

canon powershot a3300 is manual



File Name: canon powershot a3300 is manual.pdf

Size: 3420 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 25 May 2019, 16:52 PM

Rating: 4.6/5 from 628 votes.

Status: AVAILABLE

Last checked: 9 Minutes ago!

In order to read or download canon powershot a3300 is manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon powershot a3300 is manual . To get started finding canon powershot a3300 is manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

canon powershot a3300 is manual

If anything is missing, contact the retailer where you purchased the camera. If there is a problem with the camera while abroad, please return it to the country of sale before proceeding with a warranty claim to a Canon Customer Support Help Desk. For Canon Customer Support contacts, please see the customer support list supplied with your camera. Shoot Shoot, leaving it to the camera to make settings.²⁴ Just take pictures Easy mode.²⁹ Take good people shots Portraits Kids and pets At the beach Against snow p. 68 p. 69 p. 69 p. Chapters 4 onward explain the advanced functions, letting you learn more as you read each chapter. A2200 Functions and precautions for the PowerShot A2200 only. The electromagnetic waves emitted by the camera may interfere with the operation of electronic instruments and other devices. Exercise adequate caution when using the camera in places where use of electronic devices is restricted, such as inside airplanes and medical facilities. Contacting other metal materials may lead to fire or explosions. The latter part of this chapter explains how to shoot and view images in Easy mode, how to shoot and view movies, and how to transfer images to a computer. Be sure to charge the battery as it is not charged at the time of purchase. Remove the cover. Insert the battery. Align the 0 marks on the battery and charger, then insert the battery by sliding it in and down. Some cards may not operate properly depending on the brand of card used. Insert the memory card as shown until it locks into place with a click. Be sure the memory card is oriented correctly. Inserting the memory card in the wrong direction could damage the camera. Open the cover and press the battery lock in the direction of the arrow. The battery will pop up. Remove the memory card. Push the memory card in until you hear a click, then slowly release it. Since the dates and times recorded into your images are based on these settings, be sure to set them. Turn on the camera. http://drbenromdhane.com/userfiles/joomla-1_5-manual-component-install.xml

- **canon powershot a3300 is manual, canon powershot a3300 is manual pdf, canon powershot a3300 is, canon powershot a3300is instruction manual, canon powershot a3300is user manual, 1.0, canon powershot a3300 is manual, canon powershot a3300 is manual pdf, canon powershot a3300 is, canon powershot a3300is instruction manual, canon powershot a3300is user manual.**

Press the power button. Move the zoom lever to choose the 3 tab. Enter Playback mode. Press the 1 button. Display the settings screen. Press and hold the m button, then immediately press the n button. Set the display language. Press the opqr buttons to choose a language, then press the m button. Formatting initializing a memory card erases all data on the memory card. As you cannot retrieve the erased data, exercise adequate caution before formatting the memory card. Press the m button. Formatting or erasing data on a memory card merely changes the file management information on the card and does not ensure its contents are completely erased. The camera can also detect and focus on faces, setting the color and brightness to optimal levels. Several AF frames will appear when the camera focuses on more than one point. AF Frame Shoot. Press the shutter button fully to shoot. The camera will play the shutter sound and shoot. Pressing the l button while turning on the camera power will turn off all sounds. Enter Playback mode. Press the 1 button. The last image you took will appear. Choose an image. Pressing the q button will cycle through the images from newest to oldest. Pressing the r button will cycle through the images from oldest to newest. Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image. Enter Playback mode. Press the 1 button. The last image you took will appear. Choose an image to erase. This prevents incorrect operation of the camera, allowing even beginners to take

worryfree pictures. Enter E mode. Set the mode dial to E. Remaining Time Compose the shot. Moving the zoom lever toward i will zoom in on your subject, making it appear larger. Once shooting begins, take your finger off the shutter button. If you change the composition of your shot during shooting, the focus will stay the same, but the brightness and tone will automatically adjust. Press the **qr** buttons to choose Play, then press the **m** button. http://fotoiaav.com/userfiles/joomla-1_0-manual-pdf.xml

The movie will play. If you press the **m** button, you can pause or resume playback. Press the **op** buttons to adjust the volume. If you are already using software included with another Canon brand compact digital camera, install the software from the included CDROM, overwriting your current installation. Install the Software. Windows Place the CD in the computer's CD ROM drive. Place the supplied CDROM DIGITAL CAMERA Solution Disk p. 2 into the computer's CDROM drive. CameraWindow will appear. In the screen that appears, click the link to modify the program. Some accessories are not sold in some regions, or may no longer be available. AC Adapter Kit ACKDC60 This kit lets you power the camera using household power. This product is designed to achieve excellent performance when used with genuine Canon accessories. P Mode Choose settings yourself to take various types of pictures p. 84. Movie Mode For shooting movies Live View Control Mode pp. 30, 105. The brightness and color can be You can use the largest possible portion of the easily set to your preferences for. Shooting Information Display No Information Display Playback No Information Simple Information Detailed Information Focus Check Display Display. However, the brightness of the image on the screen, and the brightness of the actual image recorded may be different. Muting Sounds Display the menu. Change the volume. Press the **op** buttons to choose an item, then press the **qr** buttons to adjust the volume. Move the zoom lever to choose the 3 tab. Adjust the brightness. Press the **qr** buttons to adjust the brightness. Power Saving during Shooting The screen will turn off approximately 1 minute after you stop operating the camera. This chapter assumes that the camera is set to A mode. Press the **r** button. Choose !. Press the **qr** buttons to choose !, then press the **m** button. Once set, ! will appear on the screen.

To turn the flash back on, follow the steps above to choose What if a flashing appears However, depending on the recording pixel setting p. Once inserted, however, they cannot be deleted. Be sure to check beforehand that the date and time are correctly set p. 19. Display the menu. Press the shutter button halfway to focus on the subject, then press it fully. When the selftimer starts, the lamp blinks and the selftimer sound plays. Two seconds before the shutter releases, the lamp and sound speed up the lamp remains lit when the flash will fire. Choose the settings. Choose the recording pixel setting. After pressing the **m** button, press the **op** buttons to choose Choose an option. Press the **qr** buttons to choose an option, then press the **m** button. A3200 IS A2200 Number of Shots per Memory Card Compression. Enter K mode. Set the mode dial to K. Choose a Shooting mode. After pressing the **m** button, press the **op** buttons to choose the following A3300 IS A3200 IS. Move approximately 1 m 3.3 ft. or more away from your subject and shoot. In t mode, attach the camera to a tripod to prevent the camera from moving and blurring the image. Set the camera to mode. Set the mode dial to Press the **m** button. The setting screen will appear. Use this mode in areas where camera sounds, lights and flash are not permitted. Set the camera to mode. Set the mode dial to Shoot. Take posterized shots Poster Effect Lets you take shots that look like an old poster or illustration. Shoot with the Effects of a FishEye Lens Fish eye Effect Lets you shoot with the distorting effect of a fisheye lens. Press the **qr** buttons to choose, then press the **l** button. The camera will shoot approximately two seconds after it detects a wink. Changing the number of shots in Step 1, press the **op** buttons. Shooting Long Exposures You can set the shutter speed to a range between 1 and 15 seconds to shoot long exposures. AE stands for Auto Exposure. Press the **o** button. Adjust the brightness.

While watching the screen, press the **qr** buttons to adjust the brightness, then press the **m** button.

Choose the white balance function. After pressing the **m** button, press the **op** buttons to choose an option. Press the **qr** buttons to choose an option, then press the **m** button. After pressing the **m** button, press the **op** buttons to choose an option. Press the **qr** buttons to choose an option, then press the **m** button. The setting will appear on the screen. Automatically adjusts the ISO speed to the Shooting mode and shooting conditions. Also, when the overall image is lacking in contrast, the camera will automatically correct the image for a sharper impression when shooting. Choose a Drive mode. After pressing the **m** button, press the **op** buttons to choose an option. Choose My Colors. After pressing the **m** button, press the **op** buttons to choose an option. This is effective for focusing on a specific point. After locking the focus, the focal distance will not change even when you release your finger from the shutter button. Lock the focus. Keep the shutter button pressed halfway and press the **q** button. The focus locks and % appears on the screen. Enter Face Select mode. Point the camera toward the face of the subject and press the **0** button. Choose the metering method. After pressing the **m** button, press the **op** buttons to choose an option. Press the **qr** buttons to choose an option, then press the **m** button. AE stands for "Auto Exposure". Choose ! p. 56. Lock the exposure. Point the camera toward the subject and press the **o** button while pressing the shutter button halfway. At the same time, you can use a slow shutter speed to brighten the background that the light from the flash cannot reach. Choose a Movie mode. After pressing the **m** button, press the **op** buttons to choose E. Press the **qr** buttons to choose a Movie mode, then press the **m** button. E Standard For shooting standard movies. Press the **n** button. Press the **qr** buttons to choose a playback speed.

Press the **n** button to complete the setting and restore the shooting screen. Shoot. The exposure shift bar appears. Some functions, however, may not be available depending on the Shooting mode. Refer to "Functions Available in Each Shooting Mode" and "Shooting Menu" pp. The movie editing panel and the movie editing bar will appear. Movie Editing Panel Set the editing range. Press the **op** buttons to choose, then press the **m** button. Move the zoom lever toward **g**. Images will display in an index. The number of images increase each time you move the lever toward **g**. Choose a jump method. In single image playback, press the **o** button. The jump method and the position of the currently displayed image will appear at the bottom of the screen. Choose a setting. Press the **op** buttons to choose a menu item, then press the **qr** buttons to choose an option. Press the **l** button to switch to the focus check display p. 46. For images with detected faces, you can also switch to the focus check display by pressing the **0** button. If you continue to hold the zoom lever, it will zoom in up to a maximum factor of approximately 10x. If you press the **opqr** buttons, you can move the location of the displayed area. If you choose one of those images, the camera will select four more images letting you enjoy playing back images in an unexpected order. This will work best if you take many shots of various scenes. Viewing Images on a TV Using the supplied AV cable p. A3300 IS A3200 IS Turn on the camera. Press the **1** button to turn on the camera. The image will appear on the TV nothing will appear on the screen of the camera. If you press the **n** button, a confirmation screen will appear. If you switch to Shooting mode or turn off the power before performing the operations in Step 3, images will not be protected. Press the **qr** buttons to choose an image, then press the **m** button. You cannot choose images before the first image. Protect images.

Since erased images cannot be recovered, exercise adequate caution before erasing. Protected images p. 122 cannot be erased. If you press the **n** button, a confirmation screen will appear. Press the **m** button again to deselect the image. Complete the setting. If you press the **n** button, a confirmation screen will appear. Rotate the image. Press the **qr** buttons to choose an image. Choose an image. Press the **qr** buttons to choose an image, then press the **m** button. Choose an image. Press the **qr** buttons to choose an image, then press the **m** button. Also, when the overall image is lacking in contrast, the camera will automatically correct the image for a sharper impression. Choose an image. Press the **qr** buttons to choose an image. Canon Brand PictBridge Compliant Printers This chapter uses Canon brand SELPHY CP series printers in the explanations. The displayed screens and

available functions will differ depending on the printer. Please also refer to the Printer User Guide. Connect the camera to the printer. A3300 IS A3200 IS Open the cover and insert the cable's small plug firmly into the camera terminal. Choose a menu option. Press the op buttons to choose an option. Choose the option settings. Press the qr buttons to choose the option setting. A frame will appear around the portion of the image to be trimmed. Choose a paper size. Press the op buttons to choose an option, then press the m button. Default Prints with a border. Bordered Prints without a border. Borderless Choose how many copies of an image are printed on a Nup sheet. Prints ID photos. ID Photo Only images with the same resolution as the cameras Large recording pixel setting can be chosen. These selection methods comply with the DPOF Digital Print Order Format standards. These settings will be overwritten with those set by your camera. Choose images. Follow Steps 2 and 3 on p. 123 to choose images. Make print settings. The first part of this chapter explains convenient and commonly used functions.

The latter part explains how to change shooting and playback settings to suit your purposes. Press the op buttons to choose a menu item. Press the qr buttons to choose an option. No startup image Preset images cannot be modified Preset images. Refer to the Software Guide for details. Images will be saved into folders created on each shooting date. Press the qr buttons to choose the world time zone. You can also set the daylight saving time as in Step 1. Press the m button. Image stabilization is always on. You can confirm the effects directly on the display, which makes it easier to check the Continuous composition or focus. Resumes with the image last Last seen viewed. Turn off the camera. Insert the coupler. Follow Step 2 on p. 16 to open the cover, then insert the coupler as shown until it locks into place with a click. If the items below do not solve your problem, contact a Canon Customer Support Help Desk as listed on the included customer support list. Power You pressed the power button, but nothing happened. It may be possible to solve the problem when the camera is connected to a computer via cable by reducing the transfer speed. Press the 1 button to enter Playback mode. Subject People NonHuman Subjects Icon With Background When. Page Smart Shuffle Starts Smart Shuffle. p. 119 Slideshow Plays back images automatically. p. 116 Erase Erases images Select, Select Range, All Images. p. 125 Protect Protects images Select, Select Range, All Images. p. If anything is missing, contact the retailer where you purchased the camera. Battery Pack NB8L Battery Charger Camera with Terminal Cover CB2LAICB2LAE %, 1 Interface Cable Wrist Strap IFC400PCU WS800. If there is a problem with the camera while abroad, please return it to the country of sale before proceeding with a warranty claim to a Canon Customer Support Help Desk. For Canon Customer Support contacts, please see the customer support list supplied with your camera.

A2200 Explanations without these icons apply to all three models. PowerShot A3300 IS screenshots and illustrations are used for the explanations in this guide. Trademark Acknowledgments The SDXC logo is a trademark of SD3C, LLC. Use only the recommended battery. Do not place the battery near or in direct flame. The electromagnetic waves emitted by the camera may interfere with the operation of electronic instruments and other devices. Exercise adequate caution when using the camera in places where use of electronic devices is restricted, such as inside airplanes and medical facilities. Be sure to charge the battery as it is not charged at the time of purchase. If the battery is quickly depleted even after charging, it has reached the end of. MultiMediaCards MMCplus memory cards HC MMCplus memory cards This memory card complies with the SO standards. Some cards may not operate properly depending on the brand of card used. Insert the memory card as shown until it locks into place with a click. Be sure the memory card is oriented correctly. Inserting the memory card in the wrong direction could damage the camera. Terminal A2200 Label. Open the cover and press the battery lock in the direction of the arrow. The battery will pop up. Remove the memory card. Push the memory card in until you hear a click, then slowly release it. Since the dates and times recorded into your images are based on these settings, be sure to set them. Turn on the camera. Press the power button. Display the menu. MENU Press the button. Enter Playback mode.

Press the button. Display the settings screen. Press and hold the button, then MENU immediately press the button. Formatting initializing a memory card erases all data on the memory card. As you cannot retrieve the erased data, exercise adequate caution before formatting the memory card. Press the button.

Formatting or erasing data on a memory card merely changes the file management information on the card and does not ensure its contents are completely erased. The camera can also detect and focus on faces, setting the color and brightness to optimal levels. Several AF frames will appear when the camera focuses on more than one point. Shoot. Press the shutter button fully to shoot. Attach the camera to a tripod so that the camera does not move and blur the image. What if the camera does not play any sounds DISP. Pressing the button while turning on the camera power will turn off all MENU sounds. Choose an image. Pressing the button will cycle through the images from newest to oldest. Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image. Enter Playback mode. Press the button. The last image you took will appear. Choose an image to erase. This prevents incorrect operation of the camera, allowing even beginners to take worryfree pictures. Once shooting begins, take your finger off the shutter button. If you change the composition of your shot during shooting, the focus will stay the same, but the brightness and tone will automatically adjust. Maximum clip length is approx. 10 minutes. Recording may stop even if the maximum clip length has not been reached on some memory cards. Press the buttons to choose Play, then press the button. The movie will play. If you press the button, you can pause or resume playback. After the movie finishes, appears. If you are already using software included with another Canonbrand compact digital camera, install the software from the included CDROM, overwriting your current installation. Install the Software. Windows Place the CD in the computers CD ROM drive. Place the supplied CDROM DIGITAL CAMERA Solution Disk p. Press the button to turn on the camera. Some accessories are not sold in some regions, or may no longer be available.

Power Supplies Battery Charger CB2LA12LAE A charger for charging Battery Pack NB Battery Pack NB8L Rechargeable lithiumion battery. AC Adapter Kit ACKDC60 This kit lets you power the camera using household power. This product is designed to achieve excellent performance when used with genuine Canon accessories. Ensure that you read them. Read them as necessary. Word Searches This document is provided as an Adobe Reader document. Use Adobe Reader's Search functions to find specific words or phrases that you recall but cannot find. Input search text here Table of Contents. If this does happen, do not disconnect the interface cable. Try to awaken the computer with the camera in the connected state. Some computers will not awaken properly if you disconnect the camera while they are in sleep standby mode. CameraWindow This is software that communicates with the camera. You can use it to transfer images to and from the camera, organize images on the camera, and upload movies on the camera to web services. The menu screen at the right will appear when the camera is connected to a computer. After the images are transferred from the camera, the screen changes when CameraWindow is closed. ZoomBrowser EX This is software that manages images transferred to a computer. You can use it to view, edit and print images on a computer. If you close CameraWindow after transferring images, the window at the right will appear. You can also display it by double clicking the ZoomBrowser EX icon on the desktop. Names of the Main Window Parts Display Control Panel Menu Bar Function Buttons Task Buttons Selects tasks to perform. Last Acquired Images Displays the last images transferred. For further details on the functions, refer to "List of Available Functions" in the appendix. Select a task. The major steps for the task appear here. Follow the steps in order. You can return to a previous step. An overview for the selected task appears here.

Cancels the procedure and returns to the previous window. Follow the instructions to perform the task. Only images that have not yet been transferred will start to transfer. If this happens, please use

a memory card reader to transfer. Use this window to perform the transferring procedures. Transfers all images that have not yet been transferred. Allows you to select and transfer images. Prints images. Configures the transfer folder and other settings. HINT Printing Movies Movies cannot be printed, but you can extract still images from movies, and print them after they have been saved. For details on how to save still images from movies, refer to "Extracting Stills from Movies". Sets the printer, paper Click here to crop and print a portion of an image. HINT Printing Using Other Software If you have specialized printing software installed on the computer, you can also use it to print the images. Table of Contents. Select an image to rotate or trim. Sets the printer and Rotates selected Click here to crop a paper size settings. images. portion of the selected image and print it. Sets the number of Configures the printing of the shooting information, rows or columns. Table of Contents. Click each button to display the available options. Displays incamera memory card information. Displays camera information. Starts operations for transferring images from the camera to your computer. Starts operations for protecting, rotating, and deleting images on the camera. Also transfers images from your computer to the camera. Starts operations for uploading movies on the camera to web services. Starts operations for setting the camera startup screen, startup sound, and various camera sounds. For details, refer to "My Camera Settings" in "More Advanced. Select the image you want to transfer and click the button to transfer the image to your computer. Viewer Window Thumbnail Display Turns the shooting date and folder name below the thumbnails on and off when in thumbnail display.

Changes thumbnail size Returns to the Menu screen. when in thumbnail display. Closes CameraWindow. Switches between window display modes. Thumbnail display Preview display Full screen display Doubleclicking an image switches to preview display. This mark appears on images that have not yet been transferred. Transfers the image chosen in Viewer Window to your computer. Images on the camera Cancels image selection. Clicking a folder on the left will display all images within the folder as thumbnails small images on the right of the screen. Viewer Window Thumbnail Display Turns the shooting date and folder name below the thumbnails on and off when in thumbnail display. Changes thumbnail size Returns to the Menu screen. when in thumbnail display. Closes CameraWindow. Switches between window display modes. Thumbnail display Preview display Full screen display Doubleclicking an image switches to preview display. This mark appears on images that have not yet been transferred. Deletes the image chosen in Viewer Window. Slide Show Search Displays the selected images in Performs searches on images. Delete Properties Deletes the selected images or folders. Zoom Mode suited for Scroll Mode allows Preview Mode allows the surveying many images. HINT Magnify Thumbnails to Check Images In zoom mode or scroll mode, positioning the mouse pointer over a thumbnail causes the image to appear at a higher magnification in a Mouse Over window. You can also set the Mouse Over window to not show in the Show Information menu. Display Control Panel This panel adjusts the display settings for the Browser Area. Select Images Clicking an image in the Browser Area selects that image. The Properties Window does not display in the Preview Mode. Shows or hides categories. Protect Prevents an image from being overwritten or deleted. File Name The file name can be changed. Comment You can type a comment here. Rating and My Keywords Category Sets the keywords used in Sets the rating for an searches. image.

An icon will display if a My Category is set certain Brightness Histogram models only. A graph of the highlights and shadows distribution in an image. Edit an image. Change the display magnification. Zooming in displays the Navigator window Display the shooting information. To preserve the original image intact, change the file name when saving the edited image. Registering an Editing Program Procedures Register the program so it can be started from Select a task from the left within ZoomBrowser EX. Other Image ZoomBrowser EX Select an image. Use the PhotoStitch program to create panoramic images. HINT Using the Stitch Assist Mode If you use the camera's Stitch Assist mode to record the images, PhotoStitch can automatically detect the image order and merge direction, making it easier to merge the images. Some camera models may not feature the Stitch

Assist mode. You can even add titles and other text, background music and various special effects to the movie. A Movie Size Max. Length message will appear if you try to save a longer movie. HINT About RAW Images RAW images contain the data captured by the camera's image sensor without modification. Since. Extract your best shots as stills Exporting Shooting Information You can export the shooting information recorded with an image, such as the shutter speed and exposure, as a text file. Creating Computer Wallpaper Images You can export images to serve as computer wallpaper images. Back up important images or distribute your vacation photos on discs. You can upload movies saved on the camera or a computer. Click here for most images. You can freely configure the Procedures transition effects, information displayed and display time settings. By using ratings, you can group your images for viewing or searching. Refer to the Help function for details. HINT About Image Information This chart shows the information other than shooting information that can be added to images.

Information Type My Category Ratings Comments Keywords Text input Selections are without made from a restriction. Ratings Keywords Revision Dates Comments Shooting Dates HINT. Sorting Images You can sort images in the Browser Area based on the specified parameters. In ZoomBrowser EX, it is easy to compare images so that minute differences can be detected. Procedures Select several images to compare. Actions performed on an image, such as scrolling or changing the magnification, are performed on the other image as well. Select a My Camera Settings file to replace in the righthand list and click this button to register it in the camera. If multiple My Camera Settings files are displayed in the lefthand list, choose the file you want to replace first, then register it in the camera. HINT Downloading My Camera Settings Files You can also download various files to use in My Camera Settings from CANON iMAGE GATEWAY. Table of Contents. Registering online allows you to use the various services. Select the desired item from the following and make Create your own photo album settings. Import Images from Camera Select Images to Import Only transfers chosen images from the camera. Import All Images Transfers all images from the camera. Organize Images Protect, rotate, and delete images on the camera. Also transfers Organize Images on Camera images back to the camera from your computer. Upload Images Upload Movies to YouTube Uploads movies on the camera to YouTube. Sets camera sound effects startup sound, shutter sound, Set Sounds Camera Settings operation sounds, selftimer sound. Export as a Screen Saver Exports the image as a screen saver file. Export as a Wallpaper Exports the image as a wallpaper file. Photo Print Prints one image per page. You can print "photos" easily. Index Print Lines up small versions of the images in rows and prints. Print Using Other Software Select the software to use and then print.