



File Name: canon ip5000 user manual.pdf

Size: 3761 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 11 May 2019, 15:13 PM

Rating: 4.6/5 from 763 votes.

Status: AVAILABLE

Last checked: 9 Minutes ago!

In order to read or download canon ip5000 user manual ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon ip5000 user manual . To get started finding canon ip5000 user manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

canon ip5000 user manual

For further information about extending your Canon service and support, call 18003852155, or visit our web site at www.canonesp.com. CarePAK must be purchased during your product's warranty period. Loading paper in the Sheet Feeder is easy, and is convenient if you frequently switch to and print on various sizes or types of paper. Loading paper in the Cassette allows you to print without reloading paper for each job. Flatten the four corners of the paper before loading it. You can load up to 150 sheets of plain paper 64 gsm or 17 lb, 13 mm or 0.52 inches in height in the Sheet Feeder. However, do not stack more than 50 sheets in the Paper Output Tray. For a detailed description of the printer driver settings, refer to Windows". You can load up to 150 sheets of plain paper 64 gsm or 17 lb, 13 mm or 0.52 inches in height in the Cassette. However, do not stack more than 50 sheets in the Paper Output Tray. You can also select the paper source with the printer driver. For details, refer to "Changing the Paper Source" in the Basic Printing 1 1 Push the upper center of the Front Cover to open the Paper Output Tray. For a detailed description of the printer driver settings, refer to Windows". The steps described in this section are for printing in Windows XP. Turn on the printer. "Turning on the Printer" Load the paper in the printer. The Print dialog box opens. Specify the required settings. 2 Ensure that your printer is selected. 3 Click Preferences or Properties. 1 Click Media Type to select the type of media loaded in the printer. Click Cancel Printing on BJ Status Monitor to stop printing. To show BJ Status Monitor, click Canon PIXMA iP5000 on the taskbar. BJ Status Monitor opens automatically when a printer error occurs. The steps described in this section are for printing in Mac OS X v.10.3.x. Turn on the printer. "Turning on the Printer". The Page Setup dialog box opens. Specify the required settings. 1 Select Print from the application software's File menu. <http://www.pierreseche.fr/userfiles/ibm-security-manual.xml>

- **canon pixma ip5000 service manual, canon ip5000 service manual, canon pixma ip5000 user manual, canon ip5000 user manual, canon ip5000 user manual, canon ip5000 user manual pdf, canon ip5000 user manual download, canon ip5000 user manual free, canon ip5000 user manual software, canon ip5000 user manual, canon pixma ip5000 user manual.**

The Print dialog box opens. Basic Printing 2 Select your printer from Format for. For a detailed description of the Paper Source settings, refer to "Changing the User's Guide Paper Source" in the When you select the print mode appropriate to your document from Print Mode, the document will be printed in color and at a print quality suited to the characteristics of the Media Type you have selected. To cancel a job in progress, select the desired document, then click Delete. If you do so, electric shock, fire, or damage to the camera could result. A PictBridgecompliant digital camera. A Canon Bubble Jet Direct compatible digital camera. Direct Printing from PictBridgecompatible Digital Cameras Default Camera Settings. To use Photo Paper Pro, select Fast Photo from Paper type. The following sizes and types of paper can be loaded in the printer by selecting options from Paper size and Paper type. This manual refers to Windows XP operation. The operations may vary depending on your operating system. Opening the Printer Properties Dialog Box from Your Application Program Depending on your application program, the command and menu names. See inside the back cover for a list of Canon Specialty Papers and ink tanks for this printer. On the Main tab, select Custom from Print Quality, then click Set to open the Set Print Quality dialog box. When the process is complete, click Print. To automatically optimize the image Photo Optimizer PRO automatically adjusts the photographs taken with a digital camera. Use this feature to compensate for unsatisfactory color balance and over or underexposure before printing. In Windows Me or

Windows 98 If Background Printing has been disabled, the Vivid Photo function is not available. To reduce noise from images taken with a digital camera The Photo Noise Reduction function reduces noise from blue portions such as the sky, and dark portions of the images taken with your digital camera.<http://anesaportugal.org/upload/ibm-security-zsecure-visual-client-manual.xml>

In Windows Me or Windows 98 If Background Printing has been disabled, the Photo Noise Reduction function is not available. Open the printer properties dialog box. Open the Print dialog box. "Printing with Macintosh" Set all necessary items. Register new printer driver settings. The Save Preset dialog box opens. Click OK. This registers your printer driver settings. You can retrieve or change the saved driver settings at any time. In Macintosh, doubleclick the hard disk icon, the Applications folder, the Easy PhotoPrint folder, and then doubleclick the EasyPhotoPrint icon. For example, using this feature, you can correct the redeye caused by the camera's flash or smooth and beatify the facial skin. In Macintosh, click Print. When the confirmation message is displayed, click OK. And then, click Print in the Print dialog box. The printer will not print properly if the wrong ink tank is used, or installed in the incorrect position. With your printer, ink tanks must be installed in the order of left to right as indicated below. Black BCI6BK Black BCI3eBK Yellow BCI6Y. It is important to quickly identify the empty tank using the BJ Status Monitor Windows or error messages Macintosh and replace it. Printing will resume as soon as ink tank is replaced and the Inner Cover and the Top Cover are closed. Checking the ink level 1 Doubleclick the hard disk icon where the printer driver was installed, the Applications folder, and then the Utilities folder. Ensure that the printer is on, and then push the upper center Front Cover to open the Paper Output Tray. Open the Top Cover, and pull down the Inner Cover forward to open. The Print Head Holder moves to the center. Then, remove the film. 2 Remove the orange protective cap from the bottom of the ink tank and discard it. Be sure to remove the clear film from the ink tank in the exact order shown in step 41, as failure to follow this step may cause the ink to leak and stain your clothes and hands.

The Print Head Holder moves to the right. The ink tank installation process is now complete. Follow the procedures below to clean the nozzles. If the ruled lines are shifted after running the print head maintenance, align the Print Head. Use this function when printed results are blurred or the color is incorrect. Ensure that the Inner Cover is closed. Printing the Nozzle Check Pattern Without a Computer Nozzle check pattern printing can also be executed from the printer itself. The nozzle check pattern will be printed. Clicking Initial Check Items displays the items to be checked before cleaning. 4 When the confirmation message is displayed, click OK. 5 Ensure that the pattern is printed properly. When using Mac OS X v.10.2, doubleclick the Print Center icon. 3 Select the name of your printer from the Name list and click Utility. Examine the nozzle check pattern output by the printer. The nozzle check pattern will not be printed correctly if there is not enough ink. Note that cleaning the Print Head causes waste ink to be absorbed in the waste ink absorber. Cleaning the Print Head consumes ink, so perform Print Head Cleaning only when necessary. Do not perform any other operations until the Print Head Cleaning finishes. This takes about 30 to 40 seconds. Clicking Initial Check Items displays the items to be checked before cleaning. When using Mac OS X v.10.2, doubleclick the Print Center icon. 3 Select the name of your printer from the Name list and click Utility. The nozzle check pattern is printed. Check the Print Head condition with the printed nozzle check pattern. "Printing the Nozzle Check Pattern" The nozzle check pattern will not be printed correctly if there is not enough ink. Note that cleaning the Print Head causes waste ink to be absorbed in the waste ink absorber. Print Head Deep Cleaning consumes more ink than standard Print Head Cleaning, so perform this procedure only when necessary.

Do not perform any other operation until the Print Head Deep Cleaning finishes. This takes about one minute. Clicking Initial Check Items displays the items to be checked before cleaning. Print Head Deep Cleaning starts when the POWER lamp starts blinking. Do not perform any other operation until the Print Head Deep Cleaning finishes. Clicking Initial Check Items displays the

items to be checked before cleaning. See “Replacing an Ink Tank” If the print head nozzles are still not clean, open the Top Cover and ensure that there are sufficient ink levels in all ink tanks and turn off the printer. Aligning the Print Head positions allows you to print without shifts in the color registration. Print head alignment is performed either automatically or manually. This section deals with automatic Print Head alignment only. If the pattern is printed as shown below, the Print Head is aligned automatically. The printer is now ready to use. If the pattern is not printed successfully, open the Top Cover and Inner Cover, and ensure that the ink tanks are correctly installed. Open the BJ Printer Utility dialog box. 1 Doubleclick the hard disk icon where the printer driver was installed, the Applications folder, and then the Utilities folder. 2 Doubleclick the Printer Setup Utility icon. If the pattern is printed as shown below, the Print Head is aligned automatically. If the pattern is not printed successfully, open the Top Cover and Inner Cover, and ensure that the ink tanks are correctly installed. Reduce the Intensity setting in the printer driver and try printing again. Slide the paper guides against the paper stack, and check to see if the paper is not loaded beyond the Load Limit Mark. See “Loading Paper” on page 3 and “Canon Specialty Media” Troubleshooting Try This on page 14. Be careful not to touch the components inside the printer. If you cannot extract the paper, turn the printer off, and then turn it back on.

If the paper is loaded in the Sheet Feeder, remove the paper from the Sheet Feeder. The number of flashes indicates the type of error that has occurred. Count the flashes and take the appropriate action to correct the error. Number of Possible Cause Flashes Two flashes Printer is out of. A USB port is selected if either USBnnn Canon PIXMA iP5000 or MPUSBPRNnn Canon PIXMA iP5000 where n is a number is indicated. Camera Error Message Possible Cause Printer in use. This section describes errors that are indicated on Canonbrand PictBridge or Bubble Jet Directcompatible cameras. The error messages and operations may vary depending on the camera you are using. After the computer restarts, TURN THE PRINTER ON, and select the Apple menu, then Chooser. Click the PIXMA iP5000 icon in the Chooser. Do not click the PIXMA iP5000SV icon. Close the Chooser. Register your product at www.registercanon.com to ensure product. How to Use This Manual How to Read This Manual Safety Precautions Printer Parts and Their Functions Front View Operation Panel Rear View Inside the Printer Using the Sheet Feeder and the Cassette. Default Photo Paper Plus Glossy, Photo Photo Paper Plus Glossy, Glossy Photo Paper, Fast Photo Photo Paper Pro Do not attempt to use printer in any way not described in this manual. You may cause an electric shock, fire or damage the printer if you ignore any of these safety precautions. Choosing a location Do not install the printer in a location that is unstable or subject to excessive vibration. Do not install the printer in locations that are very humid or dusty, in direct sunlight, outdoors, or close to a heating source. If such changes or modifications should be made, you could be required to stop operation of the equipment. Canon U.S.A., Inc. One Canon Plaza. Since the defective product becomes the property of Canon USA at the time of the exchange, the defective product must be returned in the shipping materials provided. As an E partner, Canon U.S.A., Inc.

, has determined that this product meets the E. This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file.Scroll down to see your support options. You can also click one of these links to search our extensive Knowledge Base or visit the Canon Community Forum. The driver may be included in your OS or you may not need a driver. Recommended Drivers File Name Date File Size Optional Drivers File Name Date File Size Recommended Software File Name Date File Size Optional Software File Name Date File Size Recommended Manuals File Name Date File Size Optional Manuals File Name Date File Size Warranty repair or replacement shall not extend the original warranty period of the Product. A dated proof of purchase is required at the time of warranty service. A copy of your dated bill of sale will satisfy this requirement. This warranty does not cover any accessories, or any consumables, such as paper or ink cartridges, as to which there shall be no warranty or replacement. Repairs of such

Canon brand peripheral equipment shall be governed by the terms of the Separate Warranty. The sole warranty, if any, with respect to such nonCanon brand items is given by the manufacturer or producer thereof. If the problem cannot be corrected over the telephone, and you elect the InstantExchange option, a reference number will be issued to you. You will be asked for the Product serial number and other information pertaining to your Product and for a ship — to location for the replacement Product must include street address. The Canon USA repair facility will ship out the replacement Product prepaid by Canon USA. After receipt of the replacement Product with instructions and a prepaid waybill, follow the enclosed instructions on how to ship your product to the Canon USA repair facility.

Your Product must be returned in the shipping carton in which the replacement Product was packed and include the reference number, A COPY OF YOUR DATED PROOF OF PURCHASE BILL OF SALE, and a complete explanation of the problem. Canon USA does not guarantee same day shipment in the event of the occurrence of factors beyond its reasonable control. The replacement Product you receive may be a refurbished or reconditioned unit and will be covered for the balance of the period remaining on your original limited warranty. InstantExchange warranty service is subject to the availability of refurbished or new replacement units. Canon U.S.A., Inc. One Canon Park Melville, NY 11747 USA Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store Tired of trying to make your handwriting legible in order to illustrate a point. For your next important meeting, you can make impressive charts and graphs with these clear, overhead transparencies, printed right from your Canon Color Bubble Jet printer. Package includes 50 sheets. Bubble Jet Simplicity. Glossy, topquality paper for vibrant, lifelike color images you wont be able to tell from the original. Has the same weight and feel as actual photo paper. Package includes 20 sheets. Optimize output resolution to create nearphotographic images. This paper is great when you want highquality color output to produce winning reports and eye-catching graphics. Use with genuine Canon Photo Inks for true photoquality output. Package includes 100 sheets. Package includes 50 sheets. Simply print your photos on the included 2 sided paper, slide the pages easily into the album, and share your memories! Simply print your photos on the included 2 sided paper, slide the pages easily into the album, and share your memories! This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 120 sheets.

This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 50 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 20 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Includes 20 sheets per pack. Learn about the technology behind the paper. Package includes 20 sheets. Package includes 15 sheets. High quality photos print right onto a sticker sheet, so just peel and stick. 16 stickers per sheet. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Quick Start Guide 703 Waterford Way, Suite 400, Miami, FL 33126, U.S.A. Canon Mexicana S. de R.L. de C.V. Periferico Sur No. 4124 Col. ExRancho de Anzaldo, C.P. 01900, Mexico, D.F. The following ink tanks are compatible with Ink Tanks Serial Number located on the inside of the printer BCI3e Black 4479A003 Model Number located on the front of the printer Copyright This manual is copyrighted by Canon U.S.A., Inc. with all rights reserved. All statements, technical info Then click the feature you want to know more about, or click

the Help button when displayed.

While in the Page Setup If the POWER lamp changes to orange and begins flashing, refer to “Handling Error Messages” on page 75.

Loading Paper

This section describes how to load paper in the Sheet Feeder and the Cassette.

Sheet Feeder

Cassette Print Media to Avoid Do not use the following types of paper. Using such paper will not only produce unsatisfactory results, but can also cause the printer to jam.

Loading paper in the Sheet Feeder is easy, and is convenient if you frequently switch to and print on various sizes or types of paper. Loading paper in the Cassette allows you to print without reloading paper for each job. This is convenient for loading a large volume of the type of paper you regularly print onto. Loading paper in both the Sheet Feeder and Cassette makes the following steps easier.

See “Printing Media” in the User’s Guide for detailed instructions on how to load envelopes and specialty media into the printer.

- 1 Flatten the four corners of the paper before loading it. When paper is curled, hold the opposing curled corners and gently bend them in the opposite direction until the Load Limit Mark.
- Do not load beyond this Load Limit Mark.
- 1 Load the paper into the Sheet Feeder with the print side facing UP.
- 2 Align the paper stack against the right side of the Sheet Feeder.
- 3 Slide the paper guides to fit the loaded paper stack. You can use general copy paper or Canon’s Super White Paper SW201. You can load up to 150 sheets of plain paper 64 gsm or 17 lb, 13 mm or 0.52 inches in height in the Sheet Feeder.

See “Printing Media” in the User’s Guide for detailed instructions on how to load envelopes and specialty media into the printer.

- 1 Flatten the four corners of the paper before loading it. When paper is curled, hold the opposing curled corners and gently bend them in the opposite direction until the Load Limit Mark.
- Do not load beyond this Load Limit Mark.
- 1 Load the paper into the Cassette with the print side facing DOWN.
- 2 Align the paper stack against the right side of the Cassette.
- 3 Slide the paper guides to fit the loaded paper stack. You can use general copy paper or Canon’s Super White Paper SW201. You can load up to 150 sheets of plain paper 64 gsm or 17 lb, 13 mm or 0.52 inches in height in the Cassette. However, do not stack more than 150 sheets.

Support the Front Cover with your hand when opening the tray.

- 1 Cassette Lamp
- 2 Press the Paper Feed Switch so that the Cassette lamp lights. You can also select the paper source with the printer driver.

The steps described in this section are for printing in Windows XP.

- 1 Turn on the printer. See “Turning on the Printer” on page 2.
- 2 Load the paper in the printer. See “Loading Paper” on page 3.
- 3 Ensure that the proper paper source is selected. When the Sheet Feeder lamp is lit, paper is fed from the Sheet Feeder. When the Cassette lamp is lit, paper is fed from the Cassette.

The Print dialog box opens.

- 2 Ensure that your printer is selected.
- 3 Click Preferences or Properties.
- 6 Specify the required settings.
- 1 Click Media Type to select the type of media loaded in the printer. So then, you will always see that your printing results can be so awesome and attractive at the same time. All of them can be the notable benefits that make your printing projects much easier and more fun to do. Thus, you do not need to break your bank account when you decide to buy this stuff. You can download a driver on the links we provided. Select it and press Continue. When you have already completed the downloading process, it will be saved in the certain folder. Do not worry, the installation will be started automatically. Find a minus sign on it. If find any broken link or some problem with this printer please let us know, we will fix it as soon as possible. You don’t have to go to the official Canon site, simple way to download it, just click on the link that we have provided, and don’t forget to follow the manual instruction or you can download a user manual for your printer on this link below.

Find out more. Okay, thanks.

Canon U.S.A., Inc. One Canon Plaza, Lake Success, NY 11042, U.S.A.
Photo Printer. Canon Inc. Series. Canon Canada, Inc. Quick Start Guide. Canon Latin America, Inc. Canon Mexicana S. de R.L. de C.V. Periferico Sur No. 4124 Col. Ex Rancho de Anzaldo, C.P. 01900, Mexico, D.F. The following ink tanks are compatible with this printer. For details on ink tank replacement, refer to “Replacing an Ink Tank” in this guide.

Ordering Information. For additional

supplies, use the following descriptions and order numbers. Help Us Help You Better. Before you contact Canon, please record the following information. Serial Number located on the inside of the printer. Description. Ink Tanks. BCI3e BlackBCI6 BlackBCI6 CyanFor quick and comprehensive selfhelp in an intuitively guided interactive troubleshootingIn addition, the latestFor individual attention to a special issue, try emailing our friendly technical engineers,This option provides live telephone technical support, free of service charges, MondaySaturday excluding holidays, during your products 1 year limited warranty period. Telephone Device for the Deaf TDD support is available at 18662513752.Canon Specialty PapersFor further information aboutFor more information and updated program specifics, please visit our web site atCall 1800OKCANON to locate a dealer near you, or visit the Canon eStore atAll other product and brand names are trademarks of theirQuick Start GuideCopyright. This manual is copyrighted by Canon U.S.A., Inc. with all rights reserved. Under the copyright laws, this manualDisclaimer. Canon U.S.A., Inc. has reviewed this manual thoroughly in order that it will be an easytouseAll statements, technical information and recommendations inSpecifications are subject to change without notice. As an ENERGY STAR partner, Canon U.S.A., Inc., has determined that this product meets the ENERGY. STAR guidelines for energy efficiency.

All information regarding nonCanon products was compiled from publicly available information. NoTrademarksCanon is a registered trademark of Canon Inc. PIXMA is a trademark of Canon Inc. PhotoRecord is a trademark of Canon Information System Research Australia. Macintosh, Mac and the Mac logo are registered trademarks of Apple Computer, Inc., registered in the U.S.Canon U.S.A., Inc. One Canon Plaza. Lake Success, NY 11042Contents. Basic Printing. Advanced Printing. Printing Maintenance. Troubleshooting. AppendixBasic Printing. This Quick Start Guide describes some of the features of your printer and howWhile in the printer's properties window, press the F1 key, or click.Help button when displayed. While in the Page Setup dialog box or Print dialog box, click.Clicking provides detailed information about each setting. When the Help window appears, select your desired topic. Turning on the PrinterThe POWER lamp flashes while the printer warms up and changes to steady nonflashing green when the printer is ready.Loading Paper. This section describes how to load paper in the Sheet Feeder and the Cassette. Sheet Feeder. CassetteDo not use the following types of paper. Using such paper will not only produceYou can load paper in both the Sheet Feeder and Cassette. Loading paper in the Sheet Feeder is easy, and is convenient if you frequently switch toLoading paper in the Cassette allows you to print without reloading paper for each job. This is convenient for loading a large volume of the type of paper you regularly printLoading paper in both the Sheet Feeder and Cassette makes the following paper feedIf you load plain paper in the Cassette and photo paper in the Sheet Feeder, changingFor example, you can specify that Lettersized plain paper isFor information on the printer driver settings, refer to "Changing the. Paper Source" in the User's Guide.

If the Sheet Feeder or Cassette runs out of paper, the paper source automaticallyThis is useful for printing onto a large volume of paper. ToFor information on the printer driver settings, refer to "Changing the. Paper Source" in the User's Guide. You can use just the Sheet Feeder or Cassette according to the location of the printer. For example, if you intend to install the printer in a small place, such as on a shelfFor more information on the media loadable in the Sheet Feeder and the. Cassette, refer to "Printing Media" in the User's Guide.When paper is curled, hold the opposing curled corners and gently bendSupport Extension toSheet Feeder LampPaper Output Tray.Extension completely.Support the Front Cover with yourYou can also select the paper source with the printer driver. For details,Load Limit Mark. Do not load beyond this Load Limit Mark.Feeder with theSheet Feeder.However, do not stackSheet Feeder with theSwitch so that the Sheet. Feeder lamp lights.For a detailed description of the printer driver settings, refer to "Printing with. Windows" on page 15, or "Printing with Macintosh" on page 18.When paper is curled, hold the opposing curled corners and gently bendCassette.Load Limit Mark. Do not load beyond this Load Limit. Mark.However, do not

stack moreCassette. Push the Cassette all the wayIf the Cassette has been extended to accommodate paper sizes largerExtension completely. Support the Front Cover withLampYou can also select the paper source with the printer driver. For details,Do not leave photo paper, such as Photo Paper Pro, in the Cassette for aFor a detailed description of the printer driver settings, refer to "Printing with Windows" on page 15, or "Printing with Macintosh" on page 18.Using Specialty Media. Canon recommends that you use genuine Canon media to ensure optimal print quality.DocumentsMedia Type. Paper Support Load Limit. Cassette. Super White Paper Up to 13 mm or. Up to 13 mm orPhoto Paper Pro. Letter up to 10.

Letter up to 10Photo Paper Plus. GlossyPhoto Paper Plus. Double SidedPhoto Paper Plus. Letter up to 10SemiglossMatte Photo Paper Up to 10 sheets. Up to 10 sheets. Glossy Photo Paper Letter up to 10. Letter up to 10High Resolution. Up to 80 sheets. Paper. TShirt TransfersTransparencies. Up to 30 sheets. Printer Driver SettingPlain Paper. Photo Paper Pro. Photo Paper Plus. Glossy. Double Sided. Matte Photo Paper. Glossy Photo Paper. High Resolution. TShirt Transfer. Transparency. Then, load one sheet at a time.Guide.Printing with WindowsSee "Turning on the Printer" on page 2.See "Loading Paper" on page 3.When the Sheet Feeder lamp is lit,When the Cassette lamp is lit, paperThe Print dialog box opens.Properties.Ensure that Paper Feed. Switch is selected from. Paper Source.For a detailed description ofUser's Guide.Main tab. You can control the print quality in the Set Print QualityFunctions Windows" in the User's Guide or Help.Some applications do not haveCANCEL button on the printer. See "Canceling Printing" on page 21.Status Monitor, click Canon PIXMA iP5000 on the taskbar. BJ Status Monitor opens automatically when a printer error occurs.Printing with MacintoshSee "Turning on the Printer" on page 2.See "Loading Paper" on page 3.When the Sheet Feeder lamp is lit,When the Cassette lamp is lit, paperThe Page Setup dialog box opens.Format for.Size.The Print dialog box opens. Media from the popup menu.Media Type.Feed Switch isSource.Mode.For a detailedPaper Source" in the User's Guide.Halftoning settings. See "Adjusting Print Quality" on page 29.Type.Driver Functions Macintosh" in the User's Guide or Help.Some applications do not haveDoubleclicking the name of your printer in the Printer list displaysTo cancel a job in progress, select the desired document, then click. Delete. To temporarily stop a job in progress, click Pause. To cancelCanceling PrintingPrinting is canceled and paper is fed out.Advanced Printing. Printing Photographs Directly from a Digital Camera.